

*business*phone
...it's your business



User's Guide

BUSINESSPHONE 250
BUSINESSPHONE 50

Portable Telephones
DT310 / DT360 / DT368

ERICSSON 

BUSINESSPHONE 250 / BUSINESSPHONE 50 – VERSION 5.0
PORTABLE TELEPHONES DT310 / DT360 / DT368

USER'S GUIDE

Copyright © 2000. Ericsson Austria AG. All rights reserved.

This document contains proprietary information which is protected by copyright. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or by any information storage and retrieval system, or translated into another language, without prior written consent of Ericsson Austria AG, Vienna, Austria.

The information in this document is subject to alteration without prior notice.

ERICSSON MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Ericsson shall not be liable for errors contained herein nor for incidental or consequential damages in connection with the furnishing, performance or use of this material.

Ericsson Austria AG
Pottendorfer Strasse 25-27
A-1121 Vienna, Austria
Telephone: +43-1-81 100-5450
Telefax: +43-1-81 100-5437
<http://www.ericsson.at>

*business*phone

...it's your business



**You can help us
make this manual
even better!**



We try to make this documentation as user-friendly as possible.

You can help us make it better, by returning this form with suggested improvements.

Fax the form to Ericsson Austria at +43-1-81 100-5437 or send an e-mail to:
businessphone.documentation@sea.ericsson.se



*This is my opinion on the
BusinessPhone 250 / BusinessPhone 50
Portable Telephones User's Guide, article
number EN/LZTBS 102 124 R2A.*

Good
Adequate
Bad

Size and format:

☐ ☐ ☐

Instructions:

☐ ☐ ☐

Symbols and illustrations:

☐ ☐ ☐

Description of functions:

☐ ☐ ☐

Quick reference guide:

☐ ☐ ☐

I have found some errors/ I suggest these improvements:

Page

Name

Position

Company

Address

City

Postcode Country.....

Tel

Fax

Email

Please feel free to add pages if you need more space!

Welcome to the User's Guide for the following portable telephones from Ericsson: DT310, DT360 and the DT368 in the BusinessPhone 250 / BusinessPhone 50 system.

It is a state-of-the-art business communications system. Its alliance of features and facilities effectively improves communications for virtually any kind of organization. To take full advantage of these advanced features and facilities there is a line of phones, designed for ease of use in every situation.

Note: The features described in this user's guide are related to version 5.0 of the BusinessPhone 250 / BusinessPhone 50 system, some features described in this guide might not work in earlier version of the system.

Some features described in this user's guide might be protected by a hardware dongle that has to be bought separately.

The portable telephones are DECT (Digital Enhanced Cordless Telephony) business cordless telephones.

Your organisations premises is covered by a number of cells which forms the coverage area. You can make and answer calls anywhere within this area, outside the area you will lose contact with the system.

Company coverage



To get the most from your portable telephone and this User's guide, we recommend to read the "Important" and "Basics" sections first.

The User's Guide describes the facilities of the BusinessPhone system and the portable telephones with a factory defaults programming. There may be some differences in the way your phone is programmed. Please consult your system administrator if you need further information.

CE 0344 X

*This Portable Telephone complies with the requirements of the following European Council Directives:
91/263/EEC concerning telecommunications terminal equipment
73/23/EEC concerning electrical safety
89/336/EEC concerning electromagnetic compatibility*

Portable DT310 / DT360 / DT368
BusinessPhone 250 / BusinessPhone 50

Table of Contents

	page
Important	5
Portable - DT310	6
Portable - DT360	10
Portable - DT368	16
Outgoing calls	22
During calls	24
Call forwarding	29
Information	33
Internal messages	37
Mailbox system	40
Abbreviated numbers	43
Group facilities	47
Other useful facilities	50
Security	55
Least Cost Routing	58
Phone book	59
Adjustments	63
Installation	64
Trouble shooting	68
Glossary	70
Useful hints	72
Index	73
Quick reference guide - DT310	78

GUIDELINES

Intrinsic safety

Consider these suggestions and guidelines to keep your telephone in good shape and working properly.

The portable is not specified as intrinsically safe, so do not use it in hazardous areas.

Battery handling

The battery contains environmental polluting material. If damaged, return it to a collecting point.

Cleaning

Clean the portable only with a soft, water dampened cloth. Using soap or any other cleaning materials may discolour or damage the portable.

Treatment

Do not expose the portable to direct sunlight for long periods. Keep the portable away from excessive heat and moisture.

HOW TO USE THIS MANUAL

Find out which portable telephone you have, and then read the related "Basics" section. This will give you a good basic understanding about the specific portable you are using.

Note: To see which portable telephone you have, see your portable above the right display corner.

The following sections describe the BusinessPhone functions for all three portable telephones, which means that the keys differ between the telephones.

Therefore, if the function procedure is the same on all three telephones, the DT368 keys are displayed to describe the function. See example below.

Example :



The "ON/MUTE"-key is different on all three telephone types. It is displayed with the DT368-key.

Press shortly to mute the ringing or warning for the moment


DESCRIPTION DT310

GENERAL

This section gives you a short description of your DT310 portable telephone, how to switch on/off your portable and how to answer and make calls.

Note: To see which portable telephone you have, see your portable above the right display corner.


DESCRIPTION PORTABLE DT310

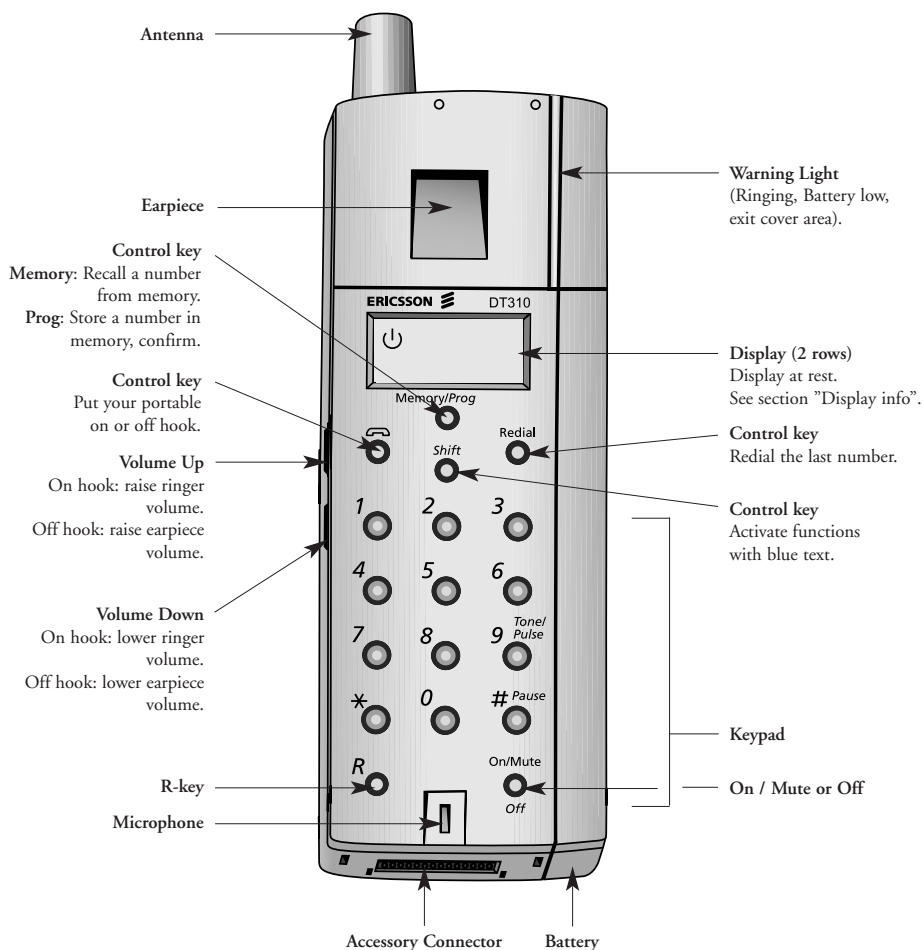

Display info

The display gives you visual feedback on the current status by showing different statuses, visualised by icons.

 The DT310 display



Display icons



Standby

On when your portable is locked to the system and flashes when you are outside the coverage area.



Call

On when your portable is off hook and flashes during ringing.



Battery

Flashes fast when the battery is low or being charged and is on when charging is completed.



Ringer off

On when the ringer is suppressed or switched off.



Program

Flashes when you have to choose a short number key and is on when entering a telephone number.

SWITCHING ON/OFF THE PORTABLE

Switch on the DT310



Press until the display lights up

If the portable does not switch on or the battery icon starts flashing, the battery is low. Charge the battery. While charging, you can use your portable normally.

Switch off the DT310



Press

Note: During calls, you cannot switch off your telephone.



Press

The display turns blank and your portable is switched off.

ANSWER CALLS

A ringing signal indicates an incoming call. The ringing type tells you whether the call is an internal, external or call back call.



Press to answer

If the portable rings at an inconvenient moment:



Press to suppress the ringing for the moment

Note: Calls can be answered at any time, no matter if you are programming, or keying in a number etc.

End the call



Press

MAKE CALLS

How to make internal and external calls.



Press

Dial tone. The call icon shows that the portable is off hook.



Enter the telephone number



Press to end the call

Note: If you receive a call while keying in the number, simply press hook to answer. You can make your calls faster by using abbreviated numbers.


DESCRIPTION DT360

GENERAL

This section gives you a short description of your DT360 portable telephone, how to switch on/off your portable and how to answer and make calls.

Note: To see which portable telephone you have, see your portable above the right display corner.


DESCRIPTION PORTABLE DT360

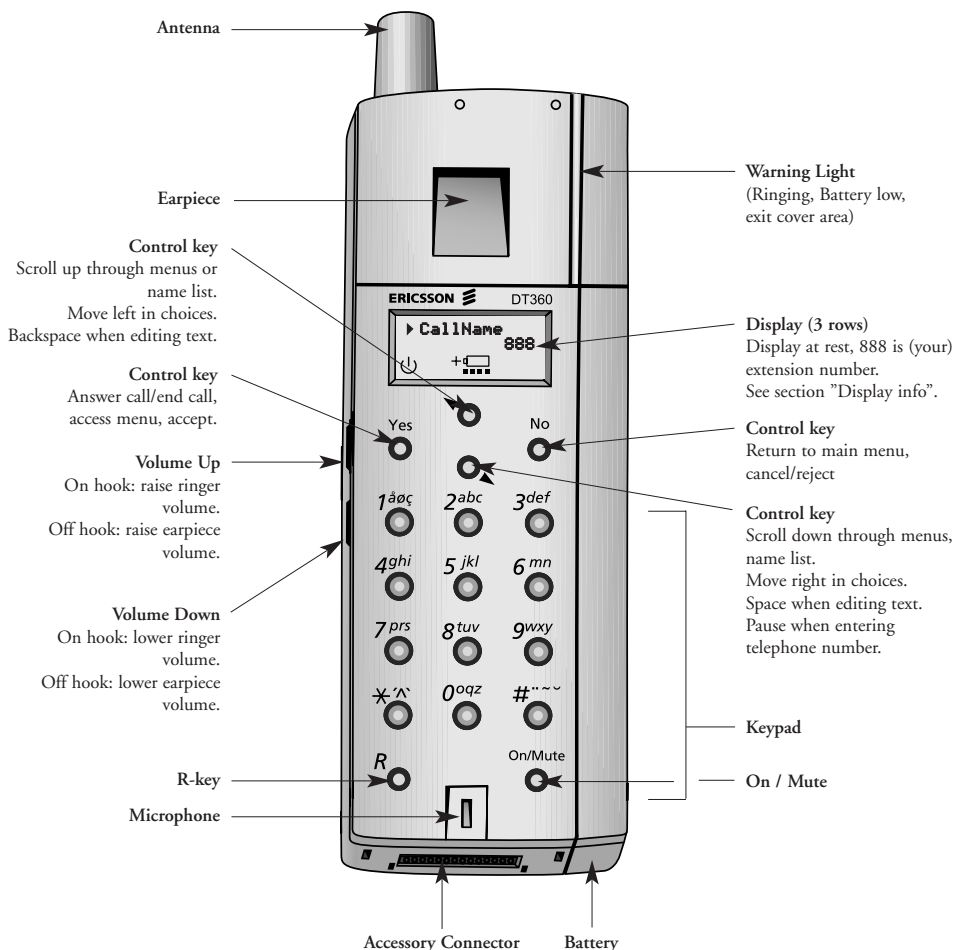

Display info

The display gives you visual feedback on all actions that you perform, and also textual warnings. The upper two rows are text rows (12 possible characters in each row), showing menus that you can access, names and numbers that you edit or dial, your phone id etc. The lower row displays different statuses, visualised by icons.

The DT360 display

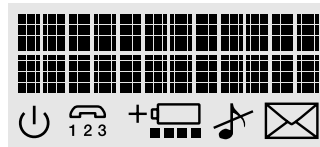

Signs in the text rows



Menu pointer

Shows the menu that can be accessed by pressing yes.



Key sign

Indicates that the name displayed is part of the fixed phone book and cannot be edited.



Number too long for display

There are more digits to the left.



Dash

Indicates that a pause is programmed in the telephone number.



Ringer Melody

Is an option you can choose from the Ringer Tones menu, to compose your own Ringing Melody. In other menus it marks a phone number as already called.



Exclamation Mark

Marks an unread entry in an entry list.

(continued)

DESCRIPTION
PORTABLE DT360
(continued)

Display icons



Standby

On when your portable is locked to the system and flashes when you are outside the coverage area.



Call

On when your portable is off hook and flashes during dialling and ringing.



Ringer off

On when the ringer is suppressed or switched off.



Message

Message received. Only available if your portable supports “message waiting” or “page messaging”.



Battery gauge

Flashes fast when the battery is being charged and is on when charging is completed. Indicates the amount of talk and standby time left:



100% left



75% left



50% left



25% left

Additional display features

Depending on which portable you have and which network you are connected to, additional display features are available. For example displaying of date, time and the number of an incoming call.

Ask your system administrator if you require additional display features.

SWITCHING ON/OFF THE PORTABLE

Switch on the DT360

On/Mute



Press until the display lights up

If the portable does not switch on or the battery icon starts flashing, the battery is low. Charge the battery. While charging, you can use your portable normally.

Note: If the signal strength icon is off and the message "NoSystem" is displayed you cannot make or answer calls.

Switch off the DT360

Note: During calls, you cannot switch off your telephone.



Press until "PowerOff" is selected

Yes



Press

The display turns blank and your portable is switched off.

ANSWER CALLS

A ringing signal indicates an incoming call. The ringing type tells you whether the call is an internal, external or call back call and the display indicates an incoming call.

Display example:



Press to answer

If the portable rings at an inconvenient moment:



Press to suppress the ringing for the moment

Note: Calls can be answered at any time, no matter if you are programming, or keying in a number etc.

End the call



Press

MAKE CALLS

 
How to make internal and external calls.



Enter the telephone number and press

Your portable will go off hook and dial the number. On the display "EndCall" is shown, this being your next choice.

► EndCall
0654321



Press to end the call

Note:

- Correct a wrong entry by pressing the up key.
- If you decide not to make the call while keying in the number, press "no" to stop.
- If you receive a call while keying in the number, simply press yes to answer.
- You can make your calls faster by using abbreviated numbers or dial-by-name.

Off Hook

If you prefer to dial a number off hook:



Press until "OffHook" is selected



Press to confirm

Dial tone.



Key your number on-line


DESCRIPTION DT368

GENERAL

This section gives you a short description of your DT368 portable telephone, how to switch on/off your portable and how to answer and make calls.

Note: To see which portable telephone you have, see your portable above the right display corner.


DESCRIPTION PORTABLE DT368

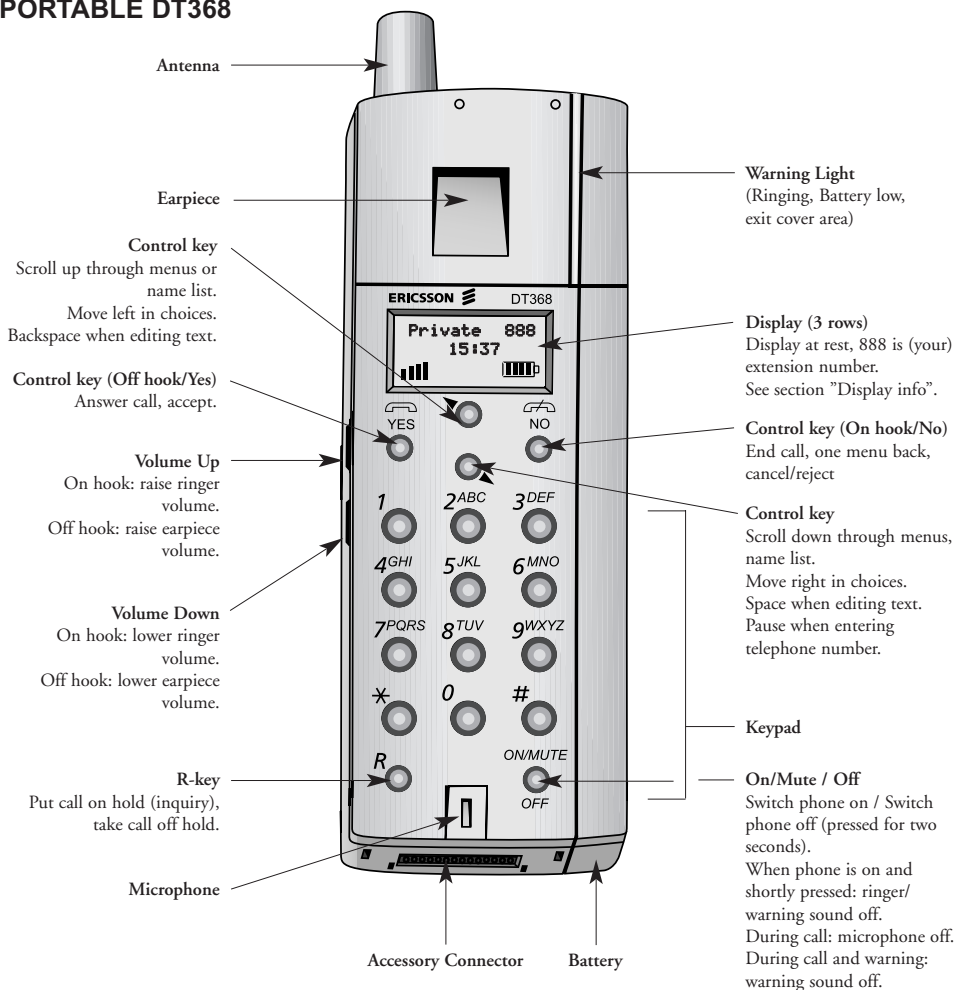

Display info

The display gives you visual feedback on all actions that you perform, and also textual warnings. The upper two rows are text rows (12 possible characters in each row), showing menus that you can access, names and numbers that you edit or dial, your phone id etc.
The lower row displays different statuses, visualised by icons.

The DT368 display

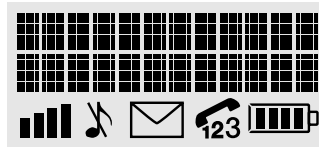

Signs in the text rows

- ▶ **Menu pointer**
Shows the menu that can be accessed by pressing yes.
- 🔑 **Key sign**
Indicates that the name displayed is part of the fixed phone book and cannot be edited.
- < **Number too long for display**
There are more digits to the left.
- **Dash**
Indicates that a pause is programmed in the telephone number.
- 🔔 **Ringer Melody**
Is an option you can choose from the Ringer Tones menu, to compose your own Ringing Melody. In other menus it marks a phone number as already called.
- ! **Exclamation Mark**
Marks an unread entry in an entry list.

(continued)

DESCRIPTION

PORTABLE DT368

(continued)

Display icons



Signal strength

On when your portable is locked to the system. The bars indicate reception quality. Four bars indicate optimal reception.



Ringer off

On when the ringer is suppressed or switched off.



Message

Message received.



Call

On when your portable is off hook and flashes during ringing.



Battery gauge

The battery cells are flashing sequentially when the battery is being charged and is on when charging is completed. Indicates the amount of talk and standby time left.

Battery low!

Charge battery

When the icon is flashing the battery is low. Four squares indicate a fully charged battery.

Additional display features

Depending on which portable you have and which network you are connected to, additional display features are available. For example displaying of date, time and the number of an incoming call.

Ask your system administrator if you require additional display features.

SWITCHING ON/OFF THE PORTABLE

Switch on the DT368



Press until the display lights up

If the portable does not switch on or the battery icon starts flashing, the battery is low. Charge the battery. While charging, you can use your portable normally.

Note: If the signal strength icon is off and the message "NoSystem" is displayed you cannot make or answer calls.

Switch off the DT368



Note: During calls, you cannot switch off your telephone.

 
Press

The display turns blank and your portable is switched off.

ANSWER CALLS

A ringing signal indicates an incoming call. The ringing type tells you whether the call is an internal, external or call back call and the display indicates an incoming call.

Display example:



Press to answer

If the portable rings at an inconvenient moment:



Press to suppress the ringing for the moment

Note: Calls can be answered at any time, no matter if you are programming, or keying in a number etc.

End the call



Press

MAKE CALLS



How to make internal and external calls.

Enter the telephone number and press

Your portable will go off hook and dial the number. On the display the duration time of the call is shown.



Press to end the call

Note:

- *Correct a wrong entry by pressing the up key.*
- *If you decide not to make the call while keying in the number, press "no" to stop.*
- *If you receive a call while keying in the number, simply press yes to answer.*
- *You can make your calls faster by using abbreviated numbers or dial-by-name.*

Off Hook



If you prefer to dial a number off hook:

Press

Dial tone.

Key your number on-line

OUTGOING CALLS GENERAL

Sometimes you make a call but the person isn't available. These functions will help you in your attempts to establish contact with the called party.

LAST EXTERNAL NUMBER REDIAL

When you initiate an external call the system automatically stores all the dialled digits, irrespective of whether the call was successful or not.



Press to redial the saved number

REDIAL NUMBER FROM LAST DIALLED LIST

Note: This chapter only applies to the DT360 and DT368 telephones.

The last ten (twenty on the DT368) dialled numbers are memorised by your portable. You can redial one of these numbers by selecting the number from the Last Dialled list.



Access "LastDialled"



Scroll, select number and confirm

A number marked with "!" means new number. You can store numbers permanently by adding them to your phone book, see section "Phonebook".

Note: The Last Dialled list will be cleared if the power of your portable is lost.

AUTOMATIC CALL-BACK

You call an extension and receive busy tone or get no answer.



Press and go "on hook"

Verification tone. You are called back if the extension finishes the ongoing call or the next time the extension finishes a new call. You have to answer within eight seconds otherwise the call-back service is cancelled.

BUSY EXTENSION

You call an extension and receive busy tone.

Camp-on

You can notify a busy extension of your call by a muted ringing call (if this function is allowed).



Press to camp on

Keep the handset off hook. When the called extension replaces the handset, it will be called automatically.

Note: If you receive the busy tone again, the desired extension does not allow camp-on.

Intrusion

You can intrude on an ongoing call on a busy extension (if this function is allowed).



Press to intrude

Intrusion tone is heard and a three-party call is established. When the called extension replaces the handset and you keep off hook, the called extension will be recalled automatically.

Note: If you still hear the busy tone, then your extension does not have the authority to intrude or the desired extension is protected against intrusion.

DURING CALLS GENERAL

This BusinessPhone system allows you to handle calls in many different ways. You can make an inquiry, transfer the call, create a conference, mute the microphone and ringer, change the dial mode or put the call on hold to perform other tasks.

TRANSFER AND INQUIRY

You have an ongoing internal or external conversation and you want to transfer the ongoing call.



Press to put the current call on hold

Dial tone.



Call the third party

You can transfer the call before answer or wait for answer.

Note: Make sure, that you are connected to the desired party. Please read the notes and warnings in section "Useful hints".



Press to return to your caller

or

Go "on hook" to transfer the call

Note: Sometimes the "R"-key must be pressed twice. Whether you can put internal calls on hold or transfer calls to external lines depends on your PBX. Consult your system administrator.

Transfer to a busy extension

You can even transfer calls to busy extensions. The other party will hear a muted signal (camp-on), and the call will be extended, as soon as the ongoing call is terminated (if camp-on is allowed).

Call-back

You are called back, if you have transferred an external call and the other extension has not answered the call within a certain time. Your telephone will ring again.

Inquiry via the phone book on DT360 and DT368



Access "R(inquiry)"

R(inquiry)



Access "CallName" and search for second party

CallName



Confirm name when found

The portable puts the call on hold and dials the second party.



Press to return to your caller

Note: When the second party answers, you can switch between the calls.

or

Go "on hook" to transfer the call

CONFERENCE

You have a conversation and you want to establish a telephone conference.



Press

Dial tone.



Call the third party



Press to establish a three party conference

Now you have established a three party conference. To mark the conference, all conference members will hear a periodical conference tone.

Repeat the procedure to include other persons to the conference

In this way, you can include up to six parties in a conversation. How many of them can be external callers depends on the programming of the system.

End the call to leave the conference

MUTE MICROPHONE

To mute the microphone, during an ongoing conversation:



Press and hold

The caller will not hear the conversation in your room.

or



Press shortly, to turn the microphone off

Short pulse sounds confirm that the microphone is off.



Press again, to turn the microphone on

Note: It is advised to use this feature instead of putting a call on hold. A call on hold may be diverted to your operator, directly or after some time.

MUTE RINGER OR WARNING

If the portable rings or a warning sounds at an inconvenient moment, e.g. when the battery runs low you will be warned by a battery low sound (4 short beeps).



Press shortly to mute the ringing or warning for the moment

The Ringer Off icon turns on to indicate that ringing is suppressed.

Note for DT368: If you mute a warning sound, do not press longer than two seconds, otherwise you will turn off the phone.

When a warning occurs during a call and you want to mute the microphone, the first press always mutes the warning sound. The second press mutes the microphone.

DIAL MODE

When calling interactive tele services, you must press certain keys (post dial) to give your response. If your portable uses tone dialling (DTMF) to make the call, just press the keys requested by the tele service. If your portable uses pulse-dialling, you must manually change to tones, after the call is established:

Note: After you end the call, dialling is always reset to the default method.

Change to tones on DT310



Press to switch to tones



Press any key to respond

Some services do not work on standard DTMF tones. They require ring tones.

(continued)

DIAL MODE (continued)

Change to tones on DT360 and DT368



Access "DialMode"

➤ DialMode

Select "Switch" or "GotoDTMF"



Press to confirm the change to tones



Press any key to respond

Some services do not work on standard DTMF tones.
They require ring tones. If so:



Access "SendTones"

➤ SendTones

Send a dial tone pause on DT368



Select "SendPause" and press to confirm

A "-" is displayed and the dial tone pause is sent.

If you are entering a phone number on hook:



Press to enter a dial tone pause

CALL FORWARDING
GENERAL

When you are not available to take calls or decide to answer your calls on another extension, it is useful to forward your calls to an alternate answering position. If you urgently need to talk to someone who has forwarded his calls, the system is also equipped with a bypass function. Depending on the type of diversion you are also able to record your personal greeting, see section “Personal greeting”.

Note: You can still make calls as usual.

Diversion on no reply

If you are not available to answer incoming calls (internal or external), your system administrator can program your portable to automatically divert calls to a programmed diversion address (default time: 15 seconds).

Diversion on busy

If your portable is busy and you receive an incoming call (internal or external), your system administrator can program your portable to automatically divert the call to a programmed diversion address.

FIXED DIVERSION

This function directs your calls to a pre-programmed answering position (e.g. secretary).

Activate fixed diversion



Dial

Special dial tone. All calls to your extension are directed to a pre-programmed address. On the DT368 display the actual diversion state is shown.

Cancel diversion



Dial

Special dial tone.


INDIVIDUAL DIVERSION

This feature gives you the possibility to divert your calls to internal and external positions, e.g. to any directory number, a colleague's extension, an external number or a common abbreviated number (e.g. your car telephone).

Note: In order to prevent misuse, individual external diversion can be blocked for your extension, see section "Security".

Program and activate internal diversion

Divert your calls to an internal position.

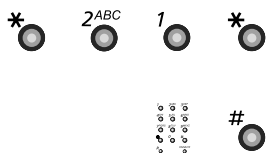

Dial

Enter the new diversion address and press

Verification tone. You can make outgoing calls as usual. A special dial tone reminds you that "Call forwarding" is active. On the DT368 display the actual follow me state is shown.

Note: An individual internal diversion cannot be activated if an individual external diversion is already activated.

Cancel internal diversion




Dial

Individual diversion is cancelled.

Program and activate a new external diversion address

To set a new individual external diversion address:

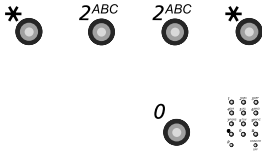

Dial

Dial the digit(s) for external call access and enter the new external diversion address

A maximum of 24 digits.



Press to activate the individual diversion

Verification tone.

Note: Individual external diversion can also be used via the DISA function, see section “Other useful facilities”.

Cancel external diversion



Dial

Note: The programmed diversion address is not removed from the memory, the diversion is just inactive.

Re-activate external diversion



Divert your calls to an external position.

Dial to activate the programmed external diversion

You can make outgoing calls as usual. A special dial tone reminds you that “Call forwarding” is active. On the DT368 display the activated external diversion is shown.

FOLLOW ME

 
To activate Follow me, "Individual Diversion" must be active on your telephone.

Activate Follow me

Note: This procedure has to be executed from the telephone the calls are diverted to.



Dial



Dial your number and press



Dial the new number to where incoming calls should be diverted



Press

Special dial tone.

Cancel Follow me

Follow me and individual diversion can also be cancelled from the answering position.



Dial



Dial your number and press

Dial tone.

BYPASS CALL FORWARDING

Bypass call forwarding makes it possible to call a specific extension, even if call forwarding is activated on this extension.



Dial



Dial the extension number and press

You will be connected to the specified extension, regardless of which type of call forwarding the called extension has activated.

INFORMATION GENERAL

If you are not in the office for a certain period of time (e.g. meeting, vacation, lunch, illness), this feature allows you to inform your callers why you are absent.

Note: When you have activated a diversion with a personal greeting, callers will receive this greeting instead of your activated absence information.

You can inform your callers with:

1) Pre-defined texts

Enter the reason for your absence and the date and time of your return. Internal callers receive the information on the display or as spoken information (depending on telephone type). External callers will be routed to the operator who also has access to your absent info.

2) Voice information

Record a voice message and name your absent information. Internal callers will hear the information via the handset or the loudspeaker. External callers will be routed to the operator who also has access to your absent info.

ENTER INFORMATION

To store text or voice information.



Dial to enter the information mode

Select "Pre-defined text" or "Voice information"

Pre-defined texts



Enter "Code" and



Enter "Completing info" from the table below

	Code	Completing info
Time of return	1	hour (00-23) minute (00-59)
Date of return	2	month (01-12) day (01-31)
Lunch	3	back at, hour minute
Meeting	4	back at, hour minute
Vacation	5	back, month day
Illness	6	back, month day




Press to enter the information

On the DT368 the programmed absence info will be shown in the display.

Pre-defined texts

Example:

Vacation, back June 27

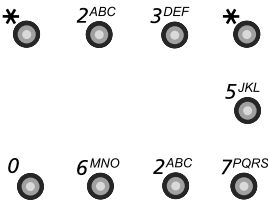

If you do not know the time of return, just press #.
Information active.

Voice information



Dial to enter the information mode



Press and speak



Press to play-back and listen to your recording



Press and speak to re-record



Press to send

Information active.

Note: You can dial your own extension number if you want to check your information.

SAVE INFORMATION

When the information is active:



Dial



Press

Verification tone. Information is passive and stored for later use.

Use saved information

When the information is switched off:



Dial



Press to activate saved info

Verification tone. Information is active.

ERASE INFORMATION



Dial to erase info

Verification tone.

INTERNAL MESSAGES

GENERAL

When you call an internal number and receive busy tone or get no answer, you can send a message to that extension. The BusinessPhone 250/50 system is also equipped with a dictaphone function.

SEND MESSAGE

You call an extension and receive the busy tone or no answer.

Two possibilities exist:

1) Call-back message

2) Voice message

See also section "Mailbox System".

Call-back



Press to send a "call me" message

Voice



Press and speak



Press to play-back



Press and speak to re-record



Press to send

CHECK AND STORE RECEIVED MESSAGES

On the DT368 received messages are indicated with a message icon and the number of queued messages. On the DT310 and DT360 a special dial tone is used to indicate waiting messages.

Received messages are divided into following three categories:

- New messages (not heard or read)
- Heard/Read messages
- Stored messages

Note: Messages are deleted from the system after a certain time. The time depends on which category the message belongs to. Please ask your system administrator regarding this.



Dial

You can check and store your received messages. Up to 20 messages can be stored.

Voice messages will be heard. "Call me" messages will call the sender automatically (these messages cannot be stored).

Note: Depending on the configuration, you might be asked for your password before you can retrieve your messages. See section "Security".

DICTAPHONE

If you want to record and retrieve personal voice messages you can use the dictaphone. A dictaphone message is treated as a normal message. How to retrieve dictaphone messages, see section “Check and store received messages”.

Record message



To start the recording:

Dial and record your message

The maximum recording time is four minutes and 15 seconds.

Select options below:



Press to play-back



Press and speak to re-record

Go “on hook” to stop recording and save the message

MAILBOX SYSTEM GENERAL

While you are away from the office, callers can leave messages in your individual mailbox. You are also able to record your personal greeting, see section “Personal greeting”.

INDIVIDUAL MAILBOX SYSTEM

If you are not in the office, you can give the service to the caller to leave a message in your mailbox.

Activate

Divert your extension to the mailbox system.



Dial



Dial the number to the mailbox system

Ask the system administrator for your defined mailbox number.



Press

Special dial tone.

Deactivate



Dial

Special dial tone.

Retrieve messages internally

When you receive a special dial tone or when the message icon appears in the display.

Note: A special dial tone is also used to indicate an activated diversion.



Dial

See section "Check and store received messages".

Retrieve messages - externally

To retrieve your messages from an external position:

Go "off hook"



Dial your company's telephone number



Dial the number to the mailbox system

During the procedure you will be asked for your extension number and your password.

PERSONAL
GREETING

Depending on the type of diversion you want to activate, you can leave three different personal greetings to the caller. The diversion state can be on no reply, on busy or an activated individual diversion.



Dial



Press

During the procedure you will be asked for your extension number and your password.



Press to configure your personal greeting



Enter diversion code

Select an option below and follow the voice announcements.

Type of diversion	Code
Diversion greeting on busy	1
Diversion greeting on no reply	2
Individual diversion greeting	3



Press to store the recorded greeting

When you activate the diversion, the recorded greeting is played to the next caller.



Press to end

Note: When you have activated a diversion with a personal greeting, callers will receive this greeting instead of your activated absence information.

ABBREVIATED NUMBERS GENERAL

By using abbreviated numbers, you can make calls simply by pressing a few keys.

Frequently used external numbers are stored as "common abbreviated numbers" in the exchange.

Up to 10 "individual abbreviated numbers" (your personal most frequently used external numbers) can be stored and used on the keys "**0" to "**9".

COMMON ABBREVIATED NUMBERS

External numbers are stored centrally in your BusinessPhone system. Common abbreviated numbers have a maximum of 4 digits and can be dialled from every extension that has the authority to do so.



Dial the common abbreviated number

Please refer to your telephone directory.
See section "Phone book".

INDIVIDUAL ABBREVIATED NUMBERS

You can program and activate your most frequently used external numbers on the keys 0 to 9.



Press



Enter the abbreviated number

A number between 0 and 9. Verification tone.

(continued)

 
INDIVIDUAL ABBREVIATED NUMBERS (continued)

Program individual abbreviated number

How to program external numbers on the keys 0 to 9.



Enter programming mode



Select an abbreviated number between 0 and 9 and press



 
Dial the number and press

The number can consist of up to 24 digits. Verification tone.

Cancel one specific individual abbreviated number



Dial



Select an abbreviated number between 0 and 9 and press

Verification tone.

Cancel all individual abbreviated numbers



Dial

Verification tone.

DIAL-BY-NAME

Note: This section only applies to the DT360 and DT368 telephones.

You can call someone by pressing the first character(s) of a name and then scroll through the name list to search for the name and number.

Example:



Call “kim” (ext. no. 123):

Press and hold until the display shows the first name beginning with “k”

kate 432

Note: Display is only principal.



Scroll up or down the name list until you find “kim”

kim 123

Note: Display is only principal.



Confirm and Kim’s number will be dialed

Note: With this method you cannot correct key presses.

(continued)

DIAL-BY-NAME
(continued)

Call Name menu

You can also call someone by accessing the Call Name menu.



Access "CallName"

CallName



Press to confirm

The display shows the first name beginning with a "k".



Scroll up or down the name list until you find "kim"

or



Key more characters or the full name in the second step and press



Confirm and Kim's number will be dialed

Note: This method allows you to correct key presses.

How to write text, see section "Phone book".

GROUP FACILITIES GENERAL

When you are working together in a team the following group facilities can be very useful.

GROUP HUNTING

Your telephone can be included in one or several hunt groups. In a hunt group all members are represented with one common directory number. 16 hunt groups can be programmed, each containing 1 to 20 members. A member can be either an extension number, an operator console or a fictive number. Please ask your system administrator if you require this function.

Note: The number of cordless extensions in a hunt group are limited to eight (including tandem configurations).

Incoming calls to the hunt group are directed to free extensions in the group. The hunt order within the group can be changed to suit your needs. If no one answers an incoming call before the programmed time, the call is forwarded to the programmed answering position (e.g. operator).

Note: If all members in a hunt group are busy, the call-back or intrusion functions are not available, however the camp-on function can still be used.

Log in

Before you can answer group hunting calls, you must log in.

To log in to one hunt group:



Dial



Dial the hunt group code

Please ask your system administrator for the configured number.



Press

(continued)

GROUP HUNTING

(continued)

To log in to all hunt groups:



Dial



Press

Answer calls

Answer group hunting calls in the normal way.

Log out

To log out from one hunt group:



Dial



Dial the hunt group code

Please ask your system administrator for the configured number.



Press

Note: If you are logged in to more than one huntgroup and log out from one of them, the display (DT368 only) will show a “logged out-message”.

To log out from all hunt groups:



Dial



Press

GROUP CALL PICK UP

In a pick up group, any member can answer any individual call to group members. You answer a call to a group member by dialling a special answering number. Please ask your system administrator for the configured number.



Dial the group call pick up code

Ask your system administrator for the group call pick up code.

COMMON BELL

The common bell facility allows all extensions of the system (operator included) to pick up the call from an extension that has been predefined as a common bell extension.



Dial the common bell pick up code

Ask your system administrator for the common bell pick up code.

If two or more extensions simultaneously attempt to answer a call from the common bell extension, only the first extension will pick it up. The other extensions will receive the "number unobtainable" tone. This will also happen if you dial the common bell pick up code and there are no calls waiting at the common bell extension.

OTHER USEFUL FACILITIES GENERAL

 
By using these facilities your productivity will be increased, e.g. you can set reminders for important meetings, place the costs for external calls on separate accounts and much more...

REMINDER

The phone can be set to remind you at any time within the next 24 hours (multiple settings are allowed).



Dial



Dial reminder time and press

(00-23) hour + (00-59) minute. When the time is reached your phone rings with recall signal.

Note: If you receive busy tone, your extension does not have the authority to set a reminder.

Cancel reminder



Dial to cancel all settings

ACCOUNT NUMBER

You can place costs for external calls on a selected account number (up to 15 digits).



Dial



Enter account number and press

Internal dial tone, make the external call.

DOORPHONE

The doorphone is used to monitor the admission to your company, i.e you can open the doorlock from your phone.

Answering door-phone calls



Press

You will be in speech connection with the calling party.

Opening of the doorlock



Press

After you have answered the doorphone, you can open the door making an inquiry to the door-opener's directory number



Dial the door-opener's directory number

Please ask your system administrator for the number.

TANDEM CONFIGURATION

The tandem configuration is a unit, consisting of two telephones using the same directory number. One of the telephones is defined as the "Primary" and the other one as the "Secondary". This function enhances the communication for users that, for example, have a wired phone on their desk (the "primary telephone") and need to be mobile within their company's building with their own portable (the "secondary telephone"). Basically the tandem configuration works as follows:

To activate the tandem configuration



Dial to log on the secondary telephone

The DT368 display indicates that a second user is logged on.

For incoming calls:

- Both telephones are treated as 1 single extension.

For outgoing calls:

- Both telephones are treated as 2 separate extensions.

(continued)

TANDEM
CONFIGURATION
(continued)

To deactivate the
tandem configuration



Dial to log off the secondary telephone

- For incoming calls:
- The "secondary" telephone cannot be called and the "primary" telephone works as a normal "stand-alone" telephone.
- For outgoing calls:
- Both telephones are treated as 2 separate extensions.

Transferring a call
between the members
of a tandem unit



Press



Dial own directory number

Go "on hook" to transfer the call

AUTOMATED
ATTENDANT

The Automated Attendant facility sends voice instructions to external and internal callers, informing them of all possible options they can choose. Voice instructions lead the callers step by step to the desired destination.



Dial the automated attendant directory number
Please ask your system administrator for the Automated Attendant directory number.

DIRECT INWARD SYSTEM ACCESS (DISA)

If you are working externally and you have the need to make business calls, call your company and use the company PBX to build up an external call to the desired party. You just pay the costs for the phone call to your company. The other costs will automatically be placed on your extension number or on a special project.

Note: To activate this function, you have to change the default password from "0000" to a personal one. Which code to use and how to change it, see section "Select password".

You can also divert calls from your office extension to your external position, see section "Call forwarding".

During the procedure you will be prompted for your password. See last page for a card to remember these specific numbers.

Go "off hook" and dial the public number of your company



followed by the DISA number

Please ask the system administrator for the defined DISA number.

or

Use the external diversion function

Procedure, see section "Call forwarding".

Note: If you program a new diversion address, remember to re-set it when you return to your office.

NETWORKING

Networking is the connection of several premises within a company. The connection can be set up via leased lines, public lines, Local Area Network (LAN) or Wide Area Network (WAN). Ask your system administrator about details regarding networking.

IP CALLS

IP calls are internal calls sent via an internal data network (LAN or WAN) and the transfer of data and voice is made on the same line. If you are connected to an internal data network the IP connection is made automatically. To minimise the traffic on the network the speech quality is decreased.

If the speech quality is not acceptable you can disconnect the IP call and switch to a non-IP call (alternative network). The switch from the IP net to the non-IP net is made during the call, so the call does not have to be disconnected.

If you want to switch to a non-IP net during the call:



Press



Dial

During the procedure the other party is put on hold. When the procedure is ready you will receive a special ringing tone and the call is resumed in the non-IP net.

***Note:** A switch to a non-IP call can only be performed if the original call is an IP call, otherwise you will receive a blocking tone.*

SECURITY GENERAL

You can block your extension in order to prevent unauthorized use of your telephone, e.g if your external calls are placed on a specific account number.

BLOCK EXTENSION



Dial to block your extension

Verification tone, your extension is blocked.

Un-block extension



Dial to re-open



Dial your password and press to re-open

Verification tone, your extension is open for use.

SELECT PASSWORD

You can use your four-digit password for blocking your phone from unauthorized use or for making external calls from any blocked extension.



Press



Dial to select a new password



Dial your present password



Press

The default password is "0000"



Dial your new password



Press

Verification tone.

BYPASS BLOCKED EXTENSION

In order to make a call, you can temporarily bypass a blocked extension. You can make one call from the extension.

Bypass own extension



Dial



Dial your password



Press

Dial tone. You can make one call from the extension.

Bypass another extension

This makes it possible to make a call on another, blocked extension, by using your password.



Dial



Dial your password



Press



Dial your extension number



Press

Dial tone. You can make one call from the extension.

LEAST COST
ROUTING
GENERAL

Least Cost Routing (LCR) automatically selects the cheapest way to establish the connection to the desired external number. Please ask your system administrator if this function is installed in your system.

LEAST COST
ROUTING

If the extension has been configured to use LCR, each external call will be analysed and the cheapest way will be selected.

Use least cost
routing



Dial the digit(s) for external call access and the external number

The usual way of making an outgoing external call.

Calling least cost
routing

If LCR has been installed in your system, but your extension is not configured to use it automatically, you also have the opportunity to get the cheapest connection by dialling the LCR code before you dial an external number.



Dial the LCR code

Please ask your system administrator for the LCR code.

Dial the digit(s) for external call access and the external number

PHONE BOOK
GENERAL

Note: This chapter only applies to the DT360 and DT368 telephones.

Your portable is equipped with a fixed phone book (a pre-programmed directory for up to 1000 names) that is useful to people in your organisation. These names are marked with a key-sign when displayed, to indicate that you cannot edit or delete them.

Your system administrator is responsible for the definition of the fixed phone book. The fixed phone book is often the same as your organisations general telephone directory.

In addition, you can create a personal directory with up to 100 names, which you can edit and erase.

The two directories are merged and alphabetically sorted in a name list.

ACCESS THE
PHONE BOOK

To access the names and numbers of the phone book.



Access "CallName"

CallName

WHO CALLED LIST

Note: This section only applies to the DT368 and DT360 telephones.

Your phone keeps a list of people who have called you (if supported by the network). Whenever there are entries in the who called list, you can view or call back the numbers with the "WhoCalled" option. Each entry in the list is displayed with a number in the upper left corner of the display. When you switch off the phone, the who called list is erased.

Note: An exclamation mark (!) after an entry number means that you have not read that entry yet. A bell icon means that you have already called that caller, irrespective whether you have had contact or not.

Call back callers



Access "WhoCalled"

WhoCalled

A list of numbers is displayed. If the number is in the phone book, the name is shown instead.




Scroll up or down the name list until you find the number you want to call back



Press to dial the number

WRITE TEXT

The characters that you can enter, are written above each key. Use the keypad to write text, e.g. when you are sending a text message. Below is explained how to write text in the Add menu.

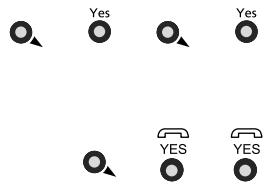

Access "Add" (DT360 only)

or

Access "Add" (DT368 only)

The portable changes to text entry mode automatically.

▶ Add

Example :



Press a digit

- | | | |
|---------|--------|---|
| 1 time | result | J |
| 2 times | result | K |
| 3 times | result | L |
| 4 times | result | 5 |

*Note for DT360: Characters å, ø and ç are at key 1. Other European characters are composed by pressing * or #, followed by the relevant key. The 'æ' and 'ß' are not included.*

Note for DT368: Key "1" is reserved for national characters. The 'æ' and 'ß' are not included.



Press to enter a space



Press to confirm your edit and exit the menu

(continued)

WRITE TEXT (continued)

Example : DT310



To enter ü press # followed by 8

Key 8 has to be pressed only once here, because the portable recognises invalid combinations with “t” and “v”.



Press to confirm your edit and exit the menu

Example : DT368



To enter ü press * followed by 8 (four times)

1 time	result	t
2 times	result	u
3 times	result	v
4 times	result	ü



Press to confirm your edit and exit the menu

ADJUSTMENTS

GENERAL

 
The BusinessPhone 50/250 system is equipped to set and adjust a personal volume.

VOLUME CONTROL

Use the volume keys to adjust the volume in the earpiece or the volume of the ringer. The volume keys have an auto repeat function. Location of volume controls, see section "Description".

Earpiece Volume


When you are making a call, the volume keys affect the earpiece volume. This is useful when e.g. you enter a machinery or a computer room. The earpiece volume can be set to 10 different levels.



To adjust the earpiece volume during a call

Ringer Volume

 When the portable is at rest or ringing, the volume keys affect the ringer level. Each time you press the key, you will hear a short ring burst so that you can verify the new volume immediately. There are 7 ringer levels. At the lowest level, the ringer is shut off.



To adjust the ringer volume

INSTALLATION GENERAL


This chapter describes the batteries (how to connect and charge) and how to connect the clip to the back of your portable.

BATTERIES

Your portable is supplied with either a standard battery or an optional, high capacity battery.

Connecting the Battery


Attach the battery to the portable as shown in the figure below.

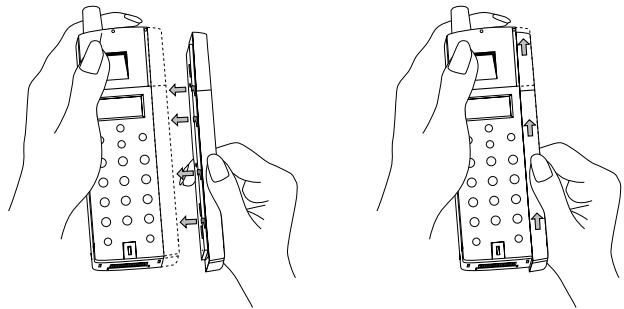

Note: Because the status of a newly received battery is uncertain, always charge it to ensure that you have sufficient talk and standby time.

Battery description

On the surface that connects to the portable you can see which battery you have, see the figure below.

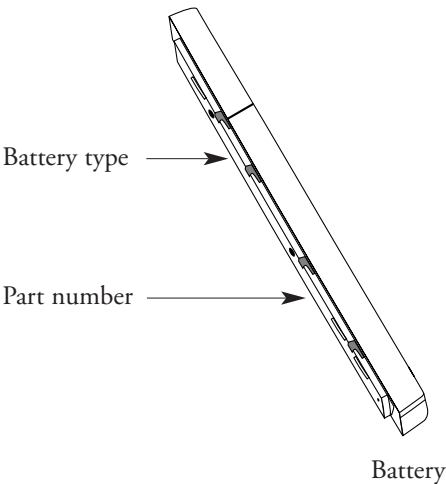

The table below indicates the difference in performance.

	<i>Talk time</i> <i>(hours)</i>	<i>Standby time</i> <i>(hours)</i>	<i>Charge time</i> <i>(minutes)</i>
High capacity for DT310, DT360	9	45	90
High capacity for DT368	10	50	90

Note: The batteries for the DT310 and DT360 phones are compatible with the DT368, but may give lower talk- and standby times.

(continued)

BATTERIES (continued)

Basic charger

When the battery requires charging, you will hear a warning sound and the display will indicate it. Use the charger that is delivered with your portable to charge the battery. Regarding charge time, see section "Battery description".


Note: For the DT368 the basic charger must be purchased separately.

To charge the battery:


Connect the adaptor to the mains socket and the charger as shown in the figure below

The charging process will start automatically, indicated by a fast flashing battery icon. When charging is complete, the icon stops flashing. While charging, you can use your portable normally.

Note: Do not connect your portable to the charger without a battery.

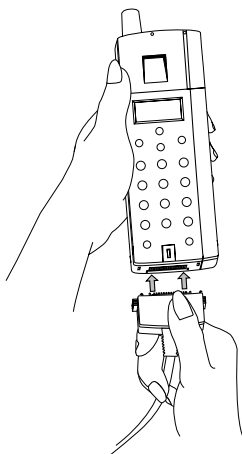

Connect the
Basic charger

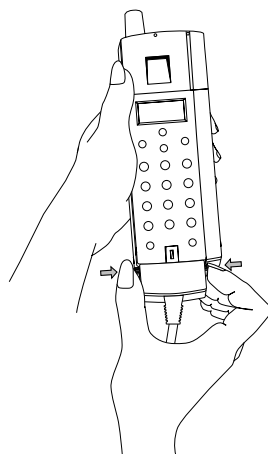


Disconnect the
Basic charger


Note: You can remove the connector from your portable at any time. If you wish, you can leave the adaptor in the mains socket when you remove the connector. Use the self adhesive cable clamp to tie the adaptor cable.

CONNECTING THE CLIP

Connect/disconnect the clip to the back of the portable as shown in the figure below.

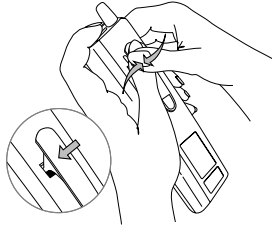

Clip connection

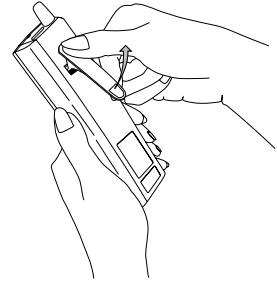

Clip disconnection

Note: Do not put your fingers on the display when you press. You can remove the clip, but don't do this too often, because this may wear out the fastening.

TROUBLE SHOOTING GENERAL

This section contains information on how to solve common operational problems, and warnings you may receive.

TROUBLE SHOOTING

Go through the following lists if you encounter any problems. If this checklist does not solve the problem, contact your system administrator. If others have similar problems, there may be a system error.

Fault check list

Fault

Probable cause

Action & Comment

No display

Battery low or portable defect
Charge battery

Display shows program and battery icon (DT310)

Display shows "Connect battery" (DT360 and DT368)

Battery not properly fit or defect
Check battery or contact system administrator

No ringing

Ringer off icon on or portable defect
Off icon on=Adjust volume

Standby icon flashes (DT310 and DT360)

Signal strength icon off (DT368)

Out of coverage area, system or portable defect
Enter coverage area or contact system administrator

Battery icon flashes slowly

Battery low
Charge battery

Call icon and/or program icon on for 2 seconds (DT310)

Call icon on for 2 seconds (DT360 and DT368)

Portable defect
Contact system administrator

Battery icon on

Charging complete, charger still connected

Disconnect the charger

“PhoneBook empty”

No names stored in the phone book

Add names

“MemoryFull”

Memory full, you can not add names

Delete a name

“EnterXXX” (DT368) (where XXX=IPEI, PIN or UPI)

IPEI code, PIN code or UPI number missing

Enter required IPEI, PIN or UPI

“KeyLock” (DT368)

The key pad is locked

Press “Yes” twice to unlock

“NoAccess” (DT368 & DT360)

Network in range, but no access rights

Select another network or resubscribe

“NoSystem” (DT368 & DT360)

Cannot connect to selected network

Select another network, subscribe or contact
system administrator

“PINBlocked Unblock” (DT368)

Phone blocked, wrong PIN code entered three times

Press “Yes” and enter IPEI code

Contact your system administrator if one of these error
messages is displayed:

- SystemList Error
- BuzzerData Error
- FixedPhone-bookError
- UserData Error
- UserPhone-bookError
- Error xx (where xx=any number)

GLOSSARY

ABBREVIATED NUMBER DIALLING

Initiating a call to a pre-programmed number by dialling a code or pressing a key. Short numbers can be: *1. Common, which means that all extensions can use them. 2. Individual, which means that they are programmed and used by each extension separately (10 numbers).* See section "Abbreviated numbers".

ACCOUNT NUMBER

To place costs for external calls on a selected account number (up to 15 digits). See section "Other useful facilities".

AUTOMATED ATTENDANT

A facility which sends voice instructions to internal and external callers, providing all options which can be chosen. Voice instructions lead the caller to the desired destination. See section "Other useful facilities".

CALL-BACK

An indication to a busy extension, to inform the person that you want to speak to him/her. See sections "Internal messages" and "Outgoing calls".

CAMP ON

To place (queue) a call to a busy extension. See section "Outgoing calls".

DIAL-BY-NAME

Initiation of a call by operating a single key. Internal numbers (or common abbreviated numbers) can be stored on each extension. See section "Abbreviated numbers".

DIRECTORY NUMBER

Numbers with 1-8 digits which are assigned to extensions or external lines or as common abbreviated numbers.

DIRECT INWARD SYSTEM ACCESS (DISA)

If you are working externally, the DISA function enables you to make external calls (long distance) via the company PBX. You only pay for the call to your company. See section "Other useful facilities".

DIVERSION

Incoming calls to an extension are diverted to another directory number (extension, common abbreviated number or the operator). There are three possibilities: *1. Direct, which means that all calls to an extension are forwarded directly. 2. On no reply, which means that a call is forwarded if it is not answered within a certain time. 3. On busy, which means that a call is forwarded if the extension is busy.* See section "Call forwarding".

DIVERSION BYPASS

This is useful for letting urgent calls through to an extension where diversion is active. See section "Call forwarding".

EXTENSION

All telephones connected to the PBX have a unique internal number (upto 8 digits). If your telephone is equipped with a display, you can see your number.

INFORMATION

Internal callers are informed about absence and time of return. External callers are diverted to the operator, where the same information is available. Information can be of two kinds: *1. Pre-programmed text information. 2. Voice information.*

INTRUSION

To intrude on an ongoing call when a requested extension is busy. See section "Outgoing calls".

IP CALL

Internal call sent via an internal data network (LAN or WAN).

ISDN

Integrated Services Digital Network. Provides your system with supplementary services from the public net.

LEAST COST ROUTING

A function that automatically selects the cheapest way to connect your external call (not necessarily the shortest distance). See section "Least cost routing".

MAILBOX	The mailbox system controls the messages that are left for or sent by you when you are absent. See section "Mailbox system".
MESSAGE	A message can be sent to any extension. This is useful when you receive the busy tone or get no answer. There are two kinds of message: 1. <i>"Call me" message</i> . 2. <i>Voice message</i> . See section "Internal messages".
MUTE MICROPHONE	To switch the microphone temporarily off. See section "During calls".
PASSWORD	A four-digit code needed to e.g. block your extension and retrieve messages from the mailbox system. You can set your own password. See section "Security".
PBX	Public Branch Exchange. Your telephone switching system (e.g. BusinessPhone 250).
PRE-DEFINED TEXT	Pre-programmed absent information. See section "Information".
THIRD PARTY	A third connection (person), which can be included in an ongoing two person conversation. The connection can be internal or external. See section "During calls".
TIE LINE	An external line from the private network.
TRANSFER	During an internal or external ongoing call you can make an inquiry and then transfer the call to another party (internal or external). See section "During calls" and "Useful hints".
TRUNK LINE	A trunk line is the same as an external line. Can be either digital or analogue.

CONNECTIONS BETWEEN EXTERNAL LINES

With your BusinessPhone PBX, you can establish an external call diversion or a conference with more than one external party or transfer an external call to another external destination (e.g. a mobile phone). These features are very useful for everyday business life.

Note: When these features are used, your BusinessPhone will occupy at least two external lines.

However, there may be disadvantages in connecting to several external lines. We would therefore like to draw your attention to the following:

- **Please do not transfer external calls to an external mailbox, to information systems or to external parties before they have answered**
- **Try to avoid diverting calls to third parties before they have answered**
- **If you are connected to two external lines, cancel one call by pressing the "R"-key and the "1"-key**

If the external parties are not persons (mailbox, automated information or attendant systems, etc.), connections on external lines can last a long time, which can be costly. Moreover, such calls may occupy two of your system's external lines. You can restrict connections between the external lines by re-programming your system. Please ask your system administrator or contact our service center for more information.

	Page		Page
Abbreviated numbers.....	43	Earpiece volume	63
Access the phone book.....	59	Erase information	36
Account number.....	50	Fixed diversion.....	29
Adjustments.....	63	Follow me.....	32
Answer calls DT310	9	Glossary.....	70
Answer calls DT360	14	Group call pick up.....	49
Answer calls DT368	20	Group facilities	47
Automated attendant.....	52	Group hunting	47
Automatic call-back	23	Guidelines	5
Batteries.....	64	How to use this manual.....	5
Block extension.....	55	Important	5
Busy extension	23	Individual abbreviated numbers.....	43
Bypass blocked extension	57	Individual diversion	30
Bypass call forwarding	32	Individual mailbox system	40
Call forwarding.....	29	Information	33
Call me message	37	Inquiry	24
Call-back	23	Installation.....	64
Camp-on	23	Internal messages	37
Charger.....	66	Intrusion.....	23
Check and store received messages.....	38	IP calls	54
Common abbreviated numbers.....	43	Last external number redial.....	22
Common bell	49	Least Cost Routing.....	58
Conference	26	Mailbox system.....	40
Connecting the battery.....	64	Make calls DT310.....	9
Connecting the clip	67	Make calls DT360.....	15
Description DT310	6	Make calls DT368.....	21
Description DT360	10	Mute microphone.....	26
Description DT368	16	Mute ringer or warning	27
Dial mode.....	27	Networking.....	54
Dial-by-name.....	45	Opening of the doorlock	51
Dictaphone	39	Other useful facilities.....	50
Direct Inward System Access (DISA).....	53	Outgoing calls	22
Display info DT310	7	Password.....	56
Display info DT360	11	Personal greeting.....	42
Display info DT368	17	Phone book	59
Diversion	29	Portable - DT310	6
Doorlock	51	Portable - DT360	10
Doorphone	51	Portable - DT368	16
During calls	24	Post dial.....	27

	Page
Pre-defined texts	34
Redial number	22
Redial number from last dialled list	22
Refer back.....	24
Reminder.....	50
Ringer volume	63
Save information.....	36
Second telephone.....	51
Security.....	55
Select password.....	56
Send message	37
Short numbers	43
Switching on/off the DT310 portable	8
Switching on/off the DT360 portable	13
Switching on/off the DT368 portable	19
Tandem configuration	51
Transfer.....	24
Trouble shooting.....	68
Two telephones.....	51
Un-block extension.....	55
Useful hints	72
Voice information	35
Voice messages.....	37
Volume control.....	63
When you receive busy tone	23
Who called list.....	60
Write text.....	61

ANSWER CALLS

Answer: On/Mute Off

Suppress ringing: Shift On/Mute Off

MAKE CALLS

Normal calls: (Dial tone)
 (Internal or external no.)

Common abbreviated number: (Abbreviated no.)

Individual abbreviated number: * * (Abbreviated no. 0-9)

Last external number redial: * * * *

YOU GET BUSY TONE OR NO ANSWER

Automatic call-back: 5 (Go "off hook" when called back)

Camp on: 4 (Keep handset off hook)

Intrusion: 8

INQUIRY

Ongoing conversation: (Call 3rd party)

CONFERENCE

Ongoing conversation: (Call 3rd party)

3 (To establish)

(To leave)

TRANSFER

Transfer a call: (Call 3rd party)

(Before or after answer)

REMINDER

Reminder (24 hours): * 3 2 * (Reminder time)

Cancel reminder: 3 2

VOLUME CONTROL

Earpiece volume (during call): ▲ or ▼

Ringer volume (at rest/ringing): ▲ or ▼

ACCOUNT NUMBER

Costs on a selected account no.: * 9 * (Account number)

MESSAGES

"Call me": 9 #

Voice: 9 9 Speak

Play-back:

Re-record: 9 Speak

Send: #

Receive messages: * 5 9 #

CALL FORWARDING

Fixed diversion: * 2 1 #

Individual internal diversion: * 2 1 * (New no.)

Cancel internal diversion: # 2 1 #

Follow me, re-direct from answering extension: * 2 1 * (Own no.) * (New no.)

Cancel from ans. extension: # 2 1 * (Own no.)

Bypass call forwarding: * 6 0 * (Extension no.)

INFORMATION


Enter information (pre-text): * 2 3 * (Select "info code" from list below) (Enter "completing info")

info code	completing info
Time of return	1. hour (00-23) minute (00-59)
Date of return	2. month (01-12) day (01-31)
Lunch	3. back at, hour minute
Meeting	4. back at, hour minute
Vacation	5. back, month day
Illness	6. back, month day


QUICK REFERENCE CARD

These cards are used for DISA and to check messages.


DISA and Message check:

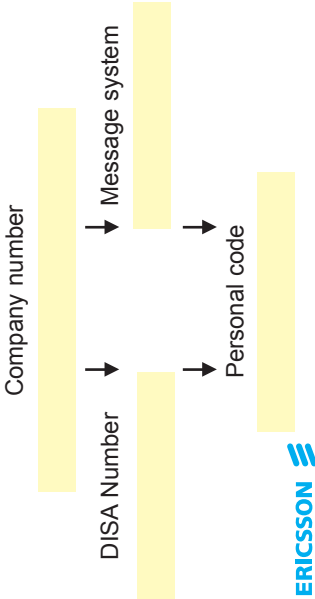


DISA and Message check:

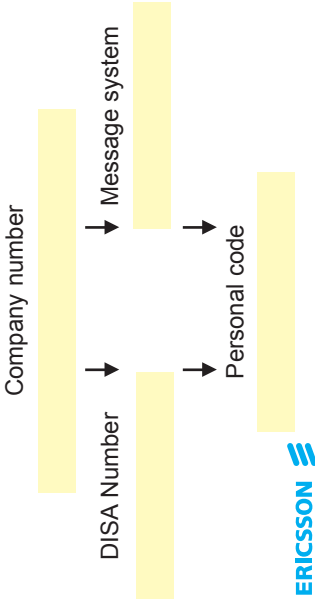

DISA and Message check:

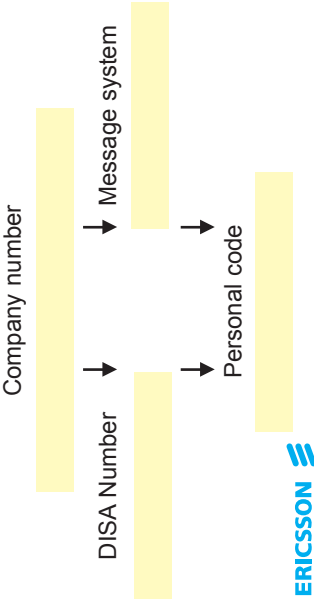

DISA and Message check:

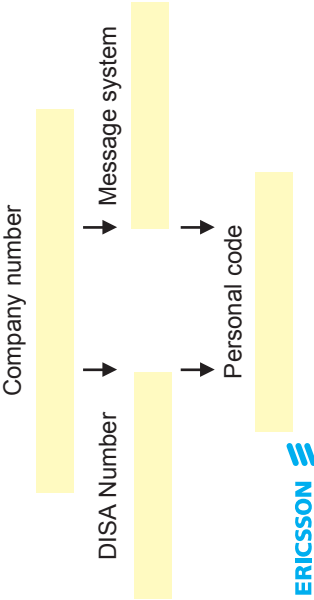

QUICK REFERENCE CARD

Special account numbers for business calls:

Project name	Account number
1	→
2	→
3	→
4	→

*business*phone
...it's your business

This is a part of EN/LZTBS 102 124 R2A

Special account numbers for business calls:

Project name	Account number
1	→
2	→
3	→
4	→

*business*phone
...it's your business

This is a part of EN/LZTBS 102 124 R2A

Special account numbers for business calls:

Project name	Account number
1	→
2	→
3	→
4	→

*business*phone
...it's your business

This is a part of EN/LZTBS 102 124 R2A

Special account numbers for business calls:

Project name	Account number
1	→
2	→
3	→
4	→

*business*phone
...it's your business

This is a part of EN/LZTBS 102 124 R2A

Communication is our business

Ericsson is the leading communications supplier, combining innovation in mobility and Internet in creating the new era of mobile Internet. Ericsson provides total solutions covering everything from systems and applications to mobile phones and other communications tools. With more than 100,000 employees in 140 countries, Ericsson simplifies communications for customers all over the world.

Read more at <http://www.ericsson.com/pressroom>

Austria

Ericsson Austria AG
 Pottendorfer Strasse 25-27
 A-1121 Vienna, Austria
 Telephone: +43-1-81 100-5450
 Telefax: +43-1-81 100-5437
<http://www.ericsson.at>

Australia

Ericsson Australia Pty Ltd.
 Ericsson Business Systems
 126-142 Trenerry Crescent
 Abbotsford Vic 3067, Australia
 Telephone, sales: +61-13-1374
 Service: +61-1800-033-216
 Telefax: +61-9284-5776
<http://www.ericsson.com.au/AU/>

United Kingdom

Enterprise Distribution
 Enterprise Networks and Datacomms
 Telecommunications Centre
 Ericsson Way, Burgess Hill
 West Sussex RH15 9UB
 Telephone: +44-(0)1444-234567
 Telefax: +44-(0)1444-874299
<http://www.ericsson.co.uk>